

# ultravent<sup>®</sup>

## Installation instructions

### 1. Choose a suitable location for the Ultravent.

Installation should be through an exterior wall towards an upper or lower corner of the room.

### 2. Create a suitable aperture through the wall.


Approximately 225mm wide x 150mm high.

### 3. Connect the external air brick onto the cavity liner.

### 4. Locate the Ultravent through the aperture.

The air brick should finish flush with the external brickwork and be pointed as necessary.

### 5. Insert internal grill into the cavity liner and fit tightly against the plaster.

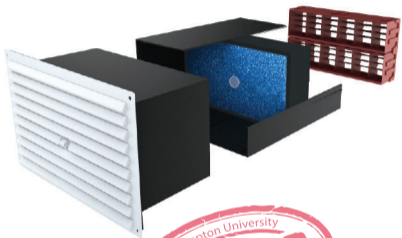

Clean filter with a damp cloth and replace every 2 years.

Full product data sheet & replacement filters available from your Ultravent stockist.