

ultravent[®] Pro

Installation instructions

1. Choose a suitable location for the Ultravent.

Installation should be through an exterior wall towards an upper or lower corner of the room.


2. Create a suitable aperture through the wall.

A 117mm core drilled aperture is required.

3. Locate the Ultravent through the aperture.

Cut to length and fit the internal grill tightly against the wall surface.

Seal around the Ultravent as required.

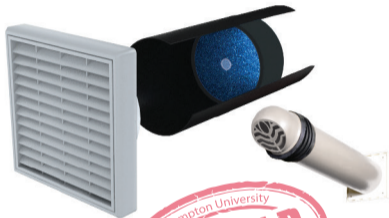

Clean filter with a damp cloth and replace every 2 years.

Full product data sheet & replacement filters available from your Ultravent stockist.